myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for PHILIPS PORTABLE DVD PLAYER PET824. You'll find the answers to all your questions on the PHILIPS PORTABLE DVD PLAYER PET824 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PHILIPS PORTABLE DVD PLAYER PET824
User guide PHILIPS PORTABLE DVD PLAYER PET824
Operating instructions PHILIPS PORTABLE DVD PLAYER PET824
Instructions for use PHILIPS PORTABLE DVD PLAYER PET824
Instruction manual PHILIPS PORTABLE DVD PLAYER PET824

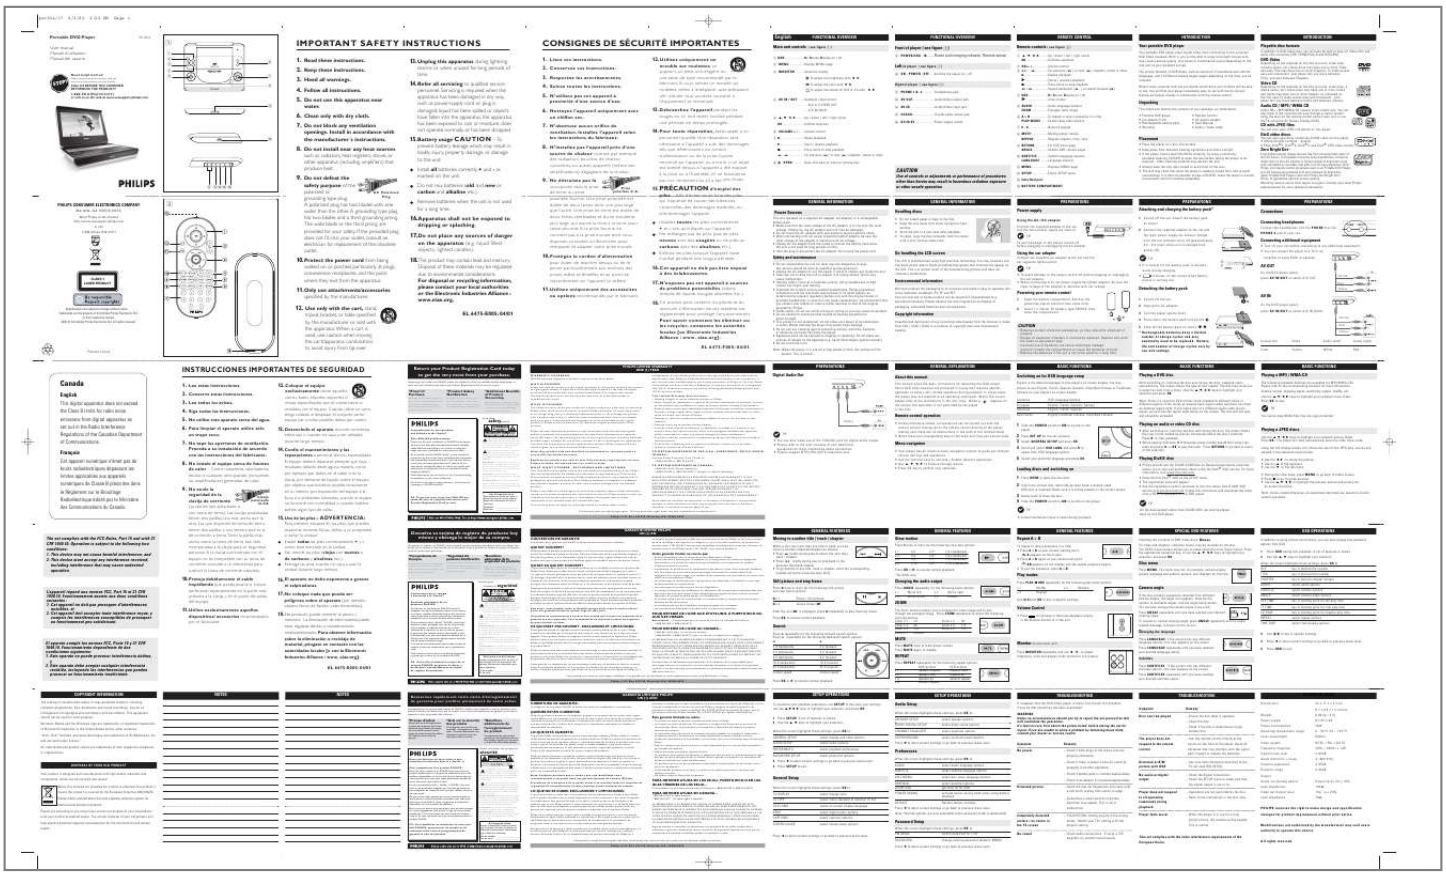

Your user manual
PHILIPS PORTABLE DVD PLAYER PET824

Manual abstract:

Otherwise, the AC adaptor and unit may be damaged. â· Do not touch the AC adaptor with wet hands to prevent electric shock. â· When connecting with car power (cigarette lighter) adaptor, be sure the input voltage of the adaptor is identical with car voltage. â· Unplug the AC adaptor from the outlet or remove the battery pack when the unit is not used for long periods of time. Do not pull the power cord. Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation. Do not attach paper or tape to the disc. â· Keep the disc away from direct sunlight or heat sources. To clean, wipe the disc outwards from the center with a soft, lint-free clean cloth. Enjoy highest-quality images that are free from annoying blank spots on the LCD screen.

lCD displays commonly have imperfections , termed as 'bright dots' by the LCD industry. A limited number of bright dots were once considered an inevitable side effect of LCD mass production. With Philips' strict quality control procedures used in our Portable DVD Players, our LCD displays are produced with zero tolerance for bright dots. Contact your local Philips representative for more detailed information. Using the AC / DC adaptor Connect the supplied adapter to the set and the main power supply (as shown).

TIP To avoid damage to the player, switch off before plugging or unplugging the AC adaptor. To avoid damage to the player, switch off before plugging or unplugging the car adaptor. â· When connecting with car power (cigarette lighter) adaptor, be sure the input voltage of the adaptor is identical with car voltage. Charge until the red indicator turns off (approximately 4. 5 - 6.

5 hours when unit is charged from power off). tIP Â· It is normal for the battery pack to become warm during charging. â· Is shown on the screen when battery power is running low. Do not place any sources of danger Connect the headphones into the PHONE 1 or the PHONE 2 jack of your set. Protect the power cord from being Walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus. This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. Do not disassemble the unit for laser rays are dangerous to eyes. Any service should be done by qualified service personnel. â· Unplug the AC adaptor to cut the power if liquid or objects get inside the unit.

â· Take care not to drop the unit or subject it to strong shocks, which may cause malfunction. Using headphones at high volume can impair your hearing. â· Important (for models with by-packed headphones): Philips guarantees compliance with the maximum sound power of its audio players as determined by relevant regulatory bodies only with the original model of provided headphones. In case this one needs replacement, we recommend that you contact your retailer to order a model identical to that of the original provided by Philips. â· Traffic safety: do not use while driving or cycling as you may cause an accident Â· Do not expose to excessive heat caused by heating equipment or direct sunlight. â· This product is not waterproof: do not allow your player to be submersed in water. Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the player. Do not place any sources of danger on the appartus (e. Note: When the player is in use for a long period of time, the surface will be heated. You may, however, see tiny black points and/or bright points(red,blue,green) that continuously appear on the LCD.

This is a normal result of the manufacturing process and does not indicate a malfunction. Turn off your set before connecting to any additional equipment. â· You can connect the player to a TV or an amplifier to enjoy DVDs or karaoke. Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.

We have reduced the packaging to its minimum and made it easy to separate into mono materials: cardboard, PS, PE and PET. Your set consists of material which can be recycled if disassembled by a specialized company. 4 Press down the battery pack lock switch ..

Your user manual
PHILIPS PORTABLE DVD PLAYER PET824